



SEC_SCP318-SET

1 Channel Z-Wave 7 Day Time Control and RF Room Thermostat

Firmware Version : 0.0

Quick Start

A This devices are wireless Actors.

Thermostat: For Inclusion of Z-Wave devices into the thermostats network do the following steps: Set DIL switch 1 on the back of the unit to 'ON' position, scroll through the function menu by rotating the dial, select "I" to include nodes into the network or "E" to exclude a node from network.
Time control: Press and hold the 'Boost' and 'Enter' buttons on the front of the timeswitch until an indicator appears in its display against the radio aerial symbol.


Please refer to the chapters below for detailed information about all aspects of the products usage.

What is Z-Wave?

This device is equipped with wireless communication complying to the Z-Wave standard. Z-Wave is the **international standard for wireless communication** in smart homes and buildings. It is using the **frequency of 868.42 MHz** to realize a very stable and secure communication. Each message is reconfirmed (**two-way communication**) and every mains powered node can act as a repeater for other nodes (**meshed network**) in case the receiver is not in direct wireless range of the transmitter.

Z-Wave differentiates between Controllers and Slaves. Slaves are either sensors (**S**) transmitting metered or measured data or actuators (**A**) capable to execute an action. Controllers are either static mains powered controllers (**C**) also referred to as gateways or mobile battery operated remote controls (**R**). This results in a number of possible communication patterns within a Z-Wave network that are partly or completely supported by a specific device.

1. Controllers control actuators
2. Actuators report change of status back to controller
3. Sensors report change of status of measured values to controller
4. Sensors directly control actuators
5. Actuators control other actuators
6. Remote controls send signals to static controllers to trigger scenes or other actions
7. Remote controls control other actuators.

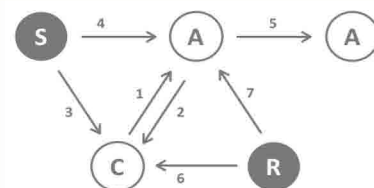

There are two different role a controller can have. There is always one single primary controller that is managing the network and including/excluding devices. The controller may have other functions - like control buttons - as well. All other controllers don't manage the network itself but can control other devices. They are called secondary controllers. The image also shows that its not possible to operate a sensor just from a remote control. Sensors only communicate with static controllers.

Product description

The SEC_SCP318-SET combines a 7 day single channel timeswitch with a wireless Z-Wave Room thermostat and can be used for adding an extra zone into an existing installation. Because of its TPI energy saving software the user can start to save up to 10% energy consumption. The Programmer and Room thermostat communicate with each other via Z Wave commands.

Time control

The SEC_SCP318 timeswitch will allow up to 3 ON/OFF settings per 24 hours 7 days a week. To temporarily override current settings the device has an 1 hour manual Boost Function, which allows the user to boost the system to be currently OFF for 1 hour, and an Advance Function button, which allows the user to advance the system to ON when currently OFF or switch the system OFF when currently ON. Additionally the device has a programming switch allowing permanent selection of: OFF/ON/AUTO/ALL DAY.

Room thermostat

The battery operated wall thermostat has a big adjustment wheel which can be used to preset the desired target temperature in the room in a range of 5°C - 30°C. By verifying the target temperature with the measured real temperature closed to the device, the unit decides how to operate a wirelessly attached power switch that is attached to the heater. In parallel a central gateway of Z-Wave control software can set the target temperature using Z-Wave. This enables to realize a time scheduled zone heating. The thermostat itself does not have any internal timers but executes the wireless settings and the local setup.

Batteries

The unit is operated by batteries. Use only batteries of correct type. Never mix old and new batteries in the same device. Used batteries contain hazardous substances and should not be disposed of with household waste!

Battery Type: 1 * CR2032

Installation Guidelines

Time control:

Fitting the backplate

Once the backplate has been removed from the packaging please ensure the timeswitch is re-sealed to prevent damage from dust and debris. The backplate should be fitted with the wiring terminals located at the top and in a position that allows a total clearance at last 50mm around the unit.

Direct wall mounting

Offer the backplate to the wall in the position where the timeswitch is to be mounted, remembering that the backplate fits to the left hand end of the control. Mark the fixing positions through the slots on the backplate (fixing centres of 60.3mm), drill and plug the wall, then secure the backplate in position. The slots in the backplate will compensate for any misalignments of the fixings.

Wiring box mounting

The backplate may be fitted directly onto a single gang steel flush wiring box complying with BS4662, using two M3.5 screws. The SCP318 is suitable for mounting on a flat surface only; they must not be positioned on a surface mounted wall box or on unearthed metal surfaces.


Electrical connections

All necessary electrical connections should now be made. Flush wiring can enter from the rear through the aperture in the backplate. Surface wiring can only enter from beneath the timeswitch and must be securely clamped. The mains supply terminals are intended to be connected to the supply by means of fixed wiring. Recommended cable sizes are 1.00 or 1.5mm². The SCP318 is double insulated and does not require an earth connection but an earth connection is provided on the backplate for terminating cable earth connectors. Earth continuity must be maintained and all bare earth connectors must be sleeved. Ensure no earth conductors are left protruding outside the central space enclosed by the backplate.

Internal diagram - SCP318 Timeswitch

WARNING: Isolate mains supply before commencing installation.

An example circuit diagram for a typical combi boiler installation is shown below. This diagram is schematic and should be used for guidance only.

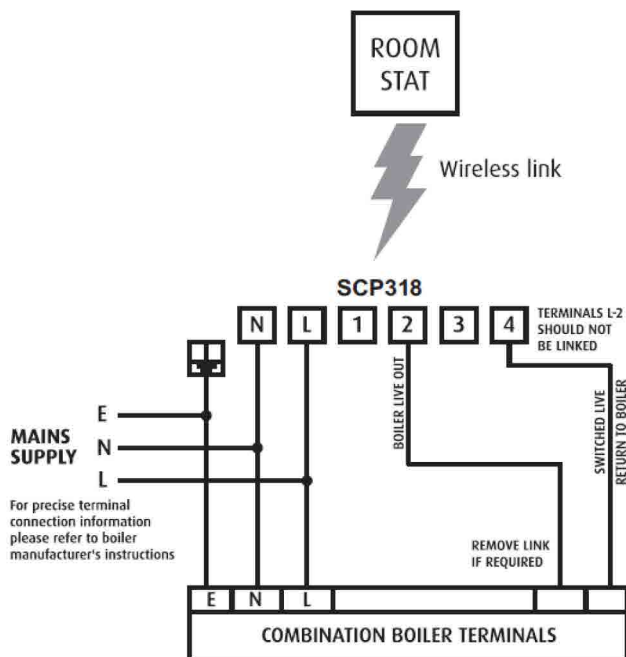

The SCP318 has voltage free contacts. A link L - 2 is required for mains voltage applications.

BATTERY: The timeswitch is fitted with a non-rechargeable, long life battery, which will maintain the programmed time settings for a minimum of ten months with the supply disconnected.


THIS SHOULD BE SUFFICIENT TO COVER POWER INTERRUPTIONS DURING THE LIFE OF THE UNIT.

During power interruptions the display will be blank, after 3 days the current time of day will be lost. These measures are to prolong the battery life.

Fitting the timeswitch


If surface wiring has been used, remove the knockout/insert from the bottom of the timeswitch to accommodate it. Loosen the two 'captive' retaining screws on the bottom of the backplate. Now fit the timeswitch to the backplate, ensuring the lugs on the backplate engage with the switch. Swing the bottom of the timeswitch into position ensuring that the connection pins on the back of the unit locate into the terminal slots in the backplate. Tighten the two captive retaining screws to fix the unit securely. Then switch on the mains supply.

Resetting the timeswitch

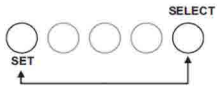


On completion of the installation please reset the timeswitch. On the SCP318 timeswitch press the SET and SELECT buttons together. Then release the buttons and the timeswitch will return to preset factory settings. The unit is now ready to be signed on to the room thermostat, to suit the user's requirements.

Thermostat:

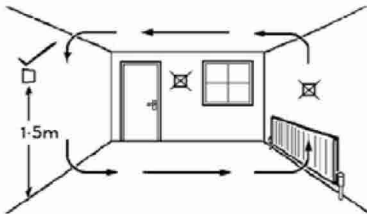

Choose a suitable mounting position in your room for installing the device. The SRT321 should be mounted on an internal wall approximately 1.5 metres from floor level using the wall plate provided and should be in a position away from draughts, direct heat and sunlight. Ensure that there will be enough space to allow easy access to the two retaining screws located at the base of the wall plate. Avoid installing the thermostat against or behind any large metal surfaces which could interfere with the radio signals.

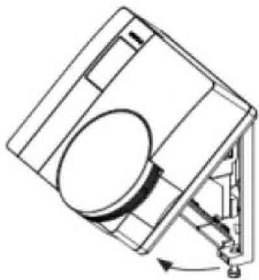

Offer the plate to the wall in the position where the SRT321 is to be mounted and mark the fixing positions through the slots in the wall plate. Drill and plug the wall, then secure the plate into position. The slots in the wall plate will compensate for any misalignment of the fixings. Undo the screws of the base of the thermostat and swing it away from the wallplate. Place the 2 x AAA batteries correctly into the battery compartment. Complete the installation by swinging the room thermostat into position by engaging with the lugs at the top of the wall plate before pushing it carefully into its plug-in terminal block. Tighten the 2 captive screws on the underside of the unit.

Pairing the devices: Pairing the devices is necessary to establish the Z-Wave connection on purpose to control the thermostat. See section Inclusion/Exclusion for the pairing.

The indicator against the radio mast symbol on the timeswitch shows that the radio link is established. A flashing indicator means that the wireless connection has been temporarily lost. This is usually restored by going to the thermostat and turning the dial up and down. If no indicator is present next to the radio mast symbol then this would suggest that the timeswitch and the thermostat have not been paired correctly on installation.

Behavior within the Z-Wave network


I On factory default the device does not belong to any Z-Wave network. The device needs to join an existing wireless network to communicate with the devices of this network. This process is called **Inclusion**. Devices can also leave a network. This process is called **Exclusion**. Both processes are initiated by the primary controller of the Z-Wave network. This controller will be turned into exclusion respective inclusion mode. Please refer to your primary controllers manual on how to turn your controller into inclusion or exclusion mode. Only if the primary controller is in inclusion or exclusion mode, this device can join or leave the network. Leaving the network - i.e. being excluded - sets the device back to factory default.

If the device already belongs to a network, follow the exclusion process before including it in your network. Otherwise inclusion of this device will fail. If the controller being included was a primary controller, it has to be reset first.

Thermostat: For Inclusion of Z-Wave devices into the thermostats network do the following steps: Set DIL switch 1 on the back of the unit to 'ON' position, scroll through the function menu by rotating the dial, select "I" to include nodes into the network or "E" to exclude a node from network. Time control: Press and hold the 'Boost' and 'Enter' buttons on the front of the timeswitch until an indicator appears in its display against the radio aerial symbol.

Operating the device

Time control:

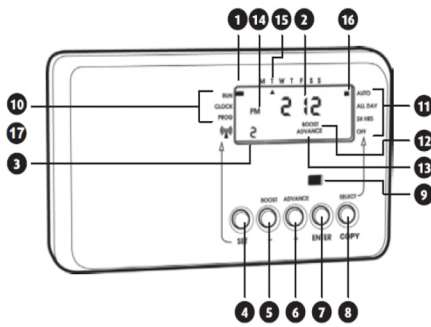

- 1 SET indicator - RUN is the normal position
- 2 Time of day
- 3 Switch period symbol
- 4 SET button
- 5 BOOST or adjust (-) button
- 6 ADVANCE or adjust (+) button
- 7 ENTER button
- 8 SELECT or COPY button
- 9 System ON indicator
- 10 SETTING positions
- 11 PROGRAMME settings
- 12 BOOST symbol
- 13 ADVANCE symbol
- 14 AM/PM symbol
- 15 Day of week indicator
- 16 PROGRAMME indicator
- 17 RF signal indicator

The room thermostat will only operate during 'On' periods set by the time control which is always indicated by the red neon indicator light on the front. If there is no light then the heating is 'Off' and the room thermostat is inoperative. When the timeswitch is 'On' (shown by the red indicator light) the thermostat will be operational and will provide very accurate control of the room temperature.

Manual Overrides

Boost Function - 1 Hour Temporary Override The boost facility will allow the user to boost the system which is currently 'OFF' for 1 hour. To indicate the boost being activated BOOST will be shown on the display for the duration of the boost period. The system ON indicator will also be illuminated.

- Press BOOST button: Your system will be boosted for 1 hour
- At any time during a BOOST period press BOOST again to return to normal programming.



Advance Function - Brings forward the next on or off operation The advance facility will allow the user to advance the system to 'ON' when currently 'OFF' or switch the system 'OFF' when currently 'ON'. To indicate the advance feature being activated ADVANCE will be shown on the display until the next programme switching time. The system ON indicator will also be illuminated.

- Press ADVANCE button once to move to the next ON/OFF time
- To cancel the advance press the ADVANCE button again. This will return the unit to its normal program.




Programme Override Facilities

With the SCP318 timeswitch operating in the normal running mode it is possible to alter the functionality of the program by means of the SELECT button.

The options include

- **Auto** - Timeswitch follows all programmed 'ON' and 'OFF' times.
- **All day** - Timeswitch operates from 1st 'ON' time until 3rd 'OFF', ignoring all switching times in between.
- **24hrs** - Timeswitch will be constantly 'ON'.
- **Off** - Timeswitch will be constantly 'OFF', there is the ability to turn off the heating during the summer without altering the programme times. Boost is still available.

All of the settings above will be permanent, i.e. unaffected by programme times, until alteration by the user. The diagram below illustrates how to alter the setting, it assumes that the programme is in the AUTO mode to begin with.

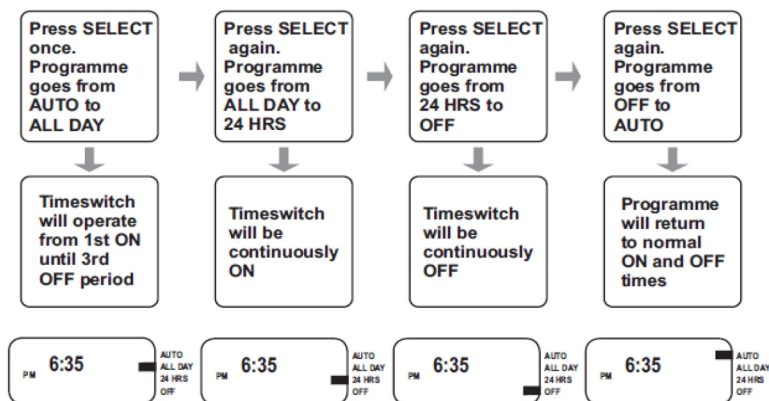


Setting Time of Day and Date

The SCP318 timeswitch has a built in clock and calendar. This will mean that you will need to enter the date as well as the time on initial set up or if the factory re-set has been used. Having done this, the clock will automatically adjust for BST/GMT time changes throughout the year.

- Press the set button until the set indicator is next to the 'clock' position.
- Use the + and - buttons to adjust the hour and press ENTER.
- Use the + and - buttons to adjust the minutes and press ENTER.
- Use the + and - buttons to set the date and press ENTER.
- Use the + and - buttons to set the month and press ENTER.
- Use the + and - buttons to set the year and press ENTER.
- Once the year is set and the ENTER button is pressed the process is complete and the display will return to the run position.
- Check that the correct time and day are showing in the display. If the wrong day is showing in the display that would indicate that the date has not been set correctly and the above process should be repeated.

Setting the On and Off Times

To alter these settings please proceed as follows:

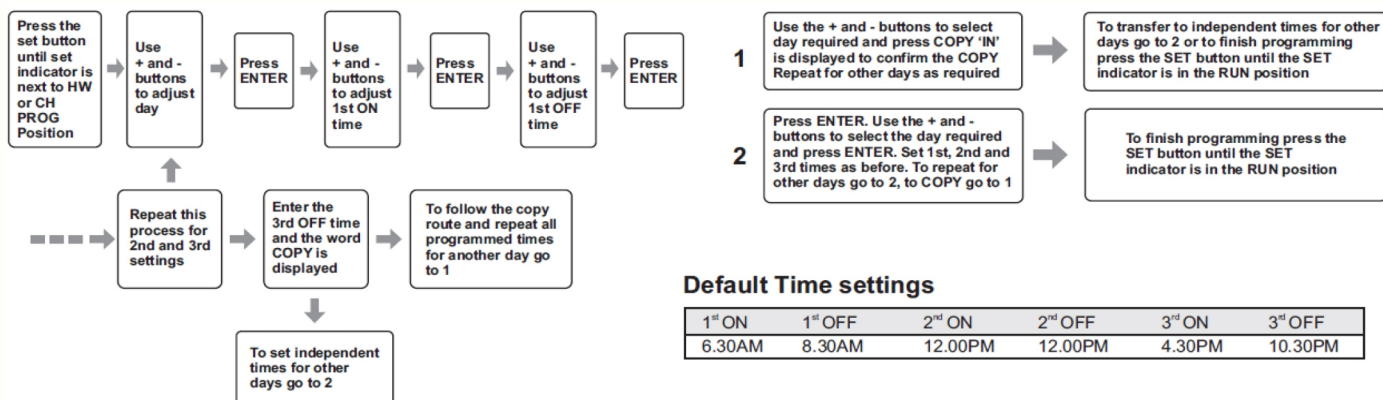


Default Time settings

1 st ON	1 st OFF	2 nd ON	2 nd OFF	3 rd ON	3 rd OFF
6.30AM	8.30AM	12.00PM	12.00PM	4.30PM	10.30PM

NB. The factory default settings for the 2nd ON/OFF times are both set at 12:00pm (midday) which cancels this 'ON' period giving 2 ON/OFF periods for the day. If a midday 'ON' period is required set the 2nd ON and OFF times accordingly. If not press ENTER twice.

Thermostat:

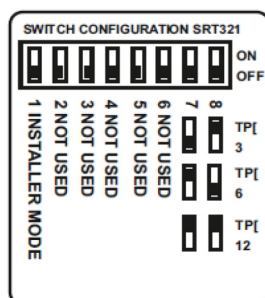

Switch positions for different TPI settings.

Thermostats using TPI (Time Proportional Integral) control algorithms will reduce the temperature swing that normally occurs when using traditional bellows or thermally operated thermostats. As a consequence, a TPI regulating thermostat will maintain the comfort level far more efficiently than any traditional thermostat.

When used with a condensing boiler, the TPI thermostat will help to save energy as the control algorithm allows the boiler to operate in condensing mode more consistently compared to older types of thermostat.

- DIL switch numbers 7 and 8 should be set as diagram opposite.
- For Gas boilers set the TPI setting to 6 cycles per hour. (Default setting)
- For Oil boilers set the TPI setting to 3 cycles per hour.
- For Electric heating set the TPI setting to 12 cycles per hour.

The **DIL switch 1** has to be set to position "ON" for **configuration mode**. To go back to normal mode switch the DIL switch 1 to the "OFF" position.

Turn the rotating dial on the front within configuration mode and select the desired function by pushing the dial once:

- **I** Include Node onto network
- **E** Exclude Node from network
- **N** Transmit Node Information Frame (NIF)
- **L** Learn Mode - use this command for Include or Exclude with another controller (does not support control group replication) Inclusion and reception of a primary role (Controller Shift)
- **Li** Receive Period Enabled (Listening). This function will keep the unit awake for 60sec, no Pass or Fail response will be provided
- **P** Protocol Reset - Press twice to activate Will restore all parameters back to factory default settings
- **A** Associate Control Unit
- **D** Disassociate Control Unit
- **C** (Primary Shift) This function allows the installer to manually relinquish the primary controller role of the SRT321 to become a secondary or inclusion controller

Wakeup Intervals - how to communicate with the device?

W This device is battery operated and turned into deep sleep state most of the time to save battery life time. Communication with the device is limited. In order to communicate with the device, a static controller **C** is needed in the network. This controller will maintain a mailbox for the battery operated devices and store commands that can not be received during deep sleep state. Without such a controller, communication may become impossible and/or the battery life time is significantly decreased.

This device will wakeup regularly and announce the wakeup state by sending out a so called Wakeup Notification. The controller can then empty the mailbox. Therefore, the device needs to be configured with the desired wakeup interval and the node ID of the controller. If the device was included by a static controller this controller will usually perform all necessary configurations. The wakeup interval is a tradeoff between maximal battery life time and the desired responses of the device.

Thermostat:

To wake up the device do the following steps: Set DIL switch 1 on the back of the unit to 'ON' position, and select one of the konfiguration functions by pushing the rotating dial once.

It is possible to set the node ID to 255 to send wakeup notifications as broadcast. In this mode device takes more time to go to sleep and drains battery faster, but can notify all it's direct neighbors about a wakeup.

Node Information Frame

NI The Node Information Frame is the business card of a Z-Wave device. It contains information about the device type and the technical capabilities. The inclusion and exclusion of the device is confirmed by sending out a Node Information Frame. Beside this it may be needed for certain network operations to send out a Node Information Frame.

Thermostat:

To send out a Node Information Frame do the following steps: Set DIL switch 1 on the back of the unit to 'ON' position, scroll through the function menu by rotating the dial, select "N".

Set and unset associations to actuators

Associations can be assigned and remove either via Z-Wave commands or using the device itself.

SA

Thermostat:

To assign associations with devices you wish to control with the thermostat do the following steps: Set DIL switch 1 on the back of the unit to 'ON'

position, scroll through the function menu by rotating the dial, select "A". Press the dedicated button on the target device you wish to control.

To disassociate an association do the following steps: Set DIL switch 1 on the back of the unit to 'ON' position, scroll through the function menu by rotating the dial, select "D". Press the dedicated button on the target device you wish to disassociate.

Special Functions as Z-Wave Controller

As long as this device is not included into a Z-Wave network of a different controller it is able to manage its own Z-Wave network as primary controller. As a primary controller the device can include and exclude other devices in its own network, manage associations, and reorganize the network in case of problems. The following controller functions are supported:

Include other device in own network

CI Communication between two Z-Wave devices only works if both belong to the same wireless network. Joining a network is called inclusion and is initiated by a controller. The controller needs to be turned into the inclusion mode. Once in this inclusion mode the other device needs to confirm the inclusion - typically by pressing a button.

Thermostat:

For Inclusion of Z-Wave devices into the thermostats network do the following steps: Set DIL switch 1 on the back of the unit to 'ON' position, scroll through the function menu by rotating the dial, select "I". Press the dedicated button on the target device to include it. Once the character starts flashing the installer has 60 sec to activate the 3rd party unit, once the 3rd party unit has been activated the process must be completed within 240 sec or the thermostat will timeout.

If current primary controller in your network is in special SIS mode this and any other secondary controller can also include and exclude devices.

To become primary a controller have to be resetted and then include a device.

Exclude device from network

The primary controller can exclude devices from the Z-Wave network. During exclusion the relationship between the device and the network of this controller is terminated. No communication between the device and other devices still in the network can happen after a successful exclusion. The controller needs to be turned into the exclusion mode. Once in this exclusion mode the other device needs to confirm the exclusion - typically by pressing a button.

Attention: Removing a device from the network means that it is turned back into factory default status. This process can also exclude devices from it's previous network.

Thermostat:

For Exclusion of Z-Wave devices from the thermostats network do the following steps: Set DIL switch 1 on the back of the unit to 'ON' position, scroll through the function menu by rotating the dial, select "E". Press the dedicated button on the target device to exclude it. Once the character starts flashing the installer has 60 sec to activate the 3rd party unit, once the 3rd party unit has been activated the process must be completed within 240 sec or the thermostat will timeout.

Shift Primary Role to a different Controller

The device can hand over its primary role to another controller and become secondary controller.

Thermostat:

Set DIL switch 1 on the back of the unit to 'ON' position, scroll through the function menu by rotating the dial, select "C". The thermostat will become the secondary controller.

Update Network Information

As a battery operated controller the device will not automatically received updates about the network structure. This process should be initiated when the primary controller has included/excluded devices and it will result in an update of the network information in the battery operated controller. This prevents wrong communication that may cost battery life and delay other communication.

Thermostat:

When the unit is a secondary or inclusion controller with a SUC/SIS present, the unit will request network updates once every 23 hours.

It is possible that a network update fails if the network was changed too much after the last update. In this case the device needs to be reincluded. Re-Inclusion is similar to a normal inclusion. It's just not needed to exclude the device before. Re-Inclusion makes sure that the node ID of the device remains unchanged.

Reset the Controller

Time control:

Press the "SET" and "SELECT" buttons together then release the buttons and the programmer will return to preset factory settings.

Thermostat:

For resetting the device do the following steps: Set DIL switch 1 on the back of the unit to 'ON' position, scroll through the function menu by rotating the dial, select "P". Confirm the procedure by double tapping the dial. Now your device is reset to factory defaults.

Command Classes

Supported Command Classes

- Application Status (version 1)
- Basic (version 1)
- Binary Switch (version 1)
- Manufacturer Specific (version 1)
- Version (version 1)

Technical Data

Battery Type	1 * CR2032
Explorer Frame Support	Yes
SDK	4.52.00
Device Type	Slave with routing capabilities
Generic Device Class	Binary Switch
Specific Device Class	Specific Device Class not used
Routing	No
FLiRS	No
Firmware Version	0.0

Explanation of Z-Wave specific terms

- **Controller** — is a Z-Wave device with capabilities to manage the network. Controllers are typically Gateways, Remote Controls or battery operated wall controllers.
- **Slave** — is a Z-Wave device without capabilities to manage the network. Slaves can be sensors, actuators and even remote controls.
- **Primary Controller** — is the central organizer of the network. It must be a controller. There can be only one primary controller in a Z-Wave network.
- **Inclusion** — is the process of bringing new Z-Wave devices into a network.
- **Exclusion** — is the process of removing Z-Wave devices from the network.
- **Association** — is a control relationship between a controlling device and a controlled device.
- **Wake up Notification** — is a special wireless message issued by a Z-Wave device to announces that is is able to communicate.
- **Node Information Frame** — is a special wireless message issued by a Z_Wave device to announce its capabilities and functions.

Disposal Guidelines

The product contains batteries. Please remove the batteries when the device is not used.

Do not dispose of electrical appliances as unsorted municipal waste, use separate collection facilities. Contact your local government for information regarding the collection systems available. If electrical appliances are disposed of in landfills or dumps, hazardous substances can leak into the groundwater and get into the food chain, damaging your health and well-being.

Технологии беспроводного умного дома «DomZWave»
197374, РФ, г.Санкт-Петербург, ул. Оптиков, д.4
umnyj@dom-z-wave.ru
dom-z-wave.ru